


# **PYRAMAT®**

PERFORMANCE GAMING

## ***S1500-W WIRELESS SOUND ROCKER™***

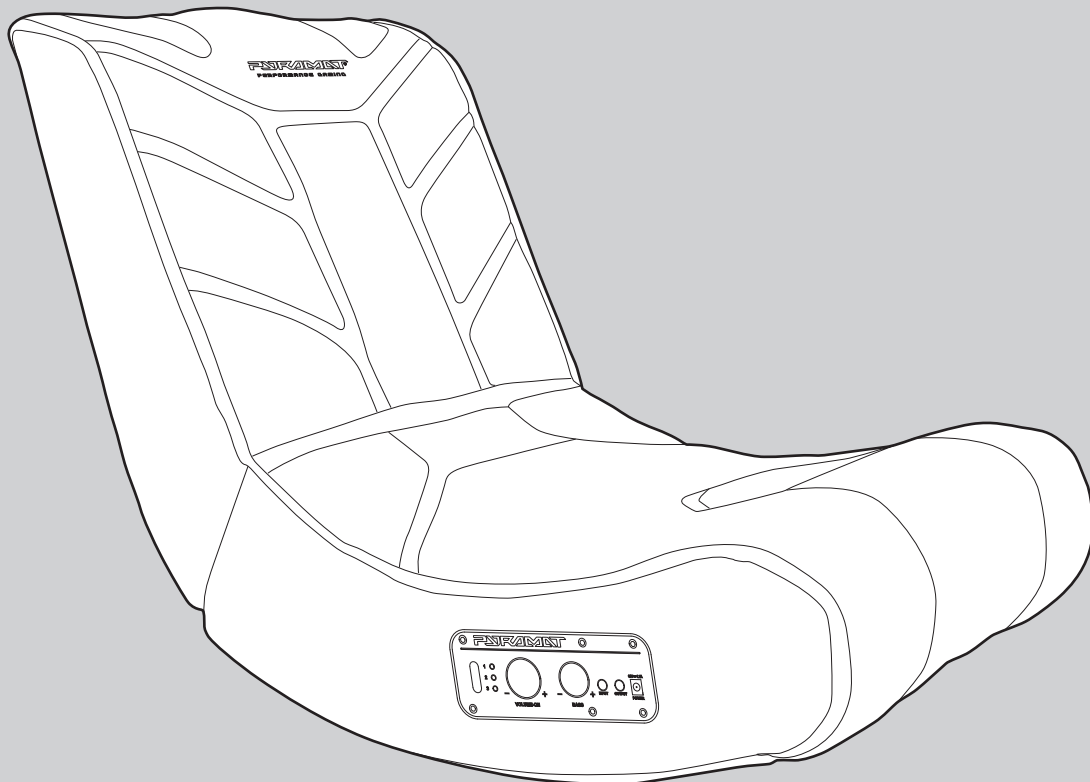

## **OWNER'S MANUAL**

**Read and understand this entire manual before using!  
For assistance contact Pyramat. DO NOT RETURN TO STORE.**

Item Number:  
**10175340**

Congratulations on the purchase of your Pyramat S1500-W Wireless Sound Rocker. The Sound Rocker is a comfortable, rockable chair that delivers a powerful audio experience designed to intensify your enjoyment of games, movies, music and more. To ensure the best results, please read this manual completely before operating your Sound Rocker, and retain it for future reference.

## CONTENTS

Safety Warnings .....	1	Direct Connection Methods .....	7-8
Before You Begin.....	2	Direct Multi-User Connection .....	9
Features.....	2	Portable Audio/Handheld Game Device Connection .....	9
Set-Up.....	3	Troubleshooting Guide.....	10
Wireless Transmitter Set-up .....	4	Warranty .....	11
Wireless Transmitter Multi-User Set-up .....	4	FCC and IC Statement.....	12
Wireless Connection Methods .....	5-6		

## SAFETY WARNINGS

**⚠ WARNING:** The Pyramat Sound Rocker is intended for indoor use only. TO REDUCE THE RISK OF FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

- Do not expose to direct sunlight or extreme temperatures.
- Adult supervision is required for set-up.
- Use only with the supplied power adapter. The power adapter is not a toy.
- Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Excessive use of audio equipment at high volume may lead to hearing loss. Listen responsibly and use common sense.
- Children under 13 should not use this product without parental supervision.
- DO NOT wash or soak the Sound Rocker with water. If cover becomes wet, disconnect power immediately and do not use until totally dry.
- To avoid injury or death from electrical shock, NEVER open the electrical cabinet or remove the cover.
- Keep hands clear from folding seam when opening the Sound Rocker.


The Sound Rocker is compatible with:

- All gaming consoles (including Xbox 360®, Wii™, and Playstation 3®)
- iPod® and all other MP3 players
- TVs, DVDs, VCRs
- Portable gaming devices (including Nintendo DS®, Nintendo DS Lite®, and PSP®)


**Need Help?** Visit our website at [www.pyramat.com](http://www.pyramat.com), send an e-mail to [service@pyramat.com](mailto:service@pyramat.com) or call toll-free at **877-591-1012**.

## BEFORE YOU BEGIN


Remove the foam separators from the Sound Rocker and take unit out of box. Check to make sure you have all the parts shown below and that all items are in good condition.

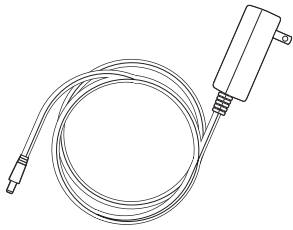

9 ft. 12 volt DC power adapter

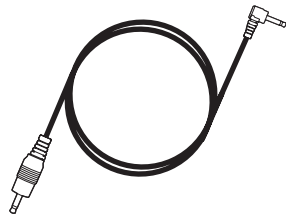

 3.5mm mini cable



RCA to 3.5mm mini adapter





Wireless transmitter

**CAUTION:** Keep fingers clear of the folding seam when opening the unit.

**Note:** Replacement cables and mini adapters can be purchased at your local audio accessory dealer or at [www.pyramat.com](http://www.pyramat.com).

## FEATURES

### Speakers

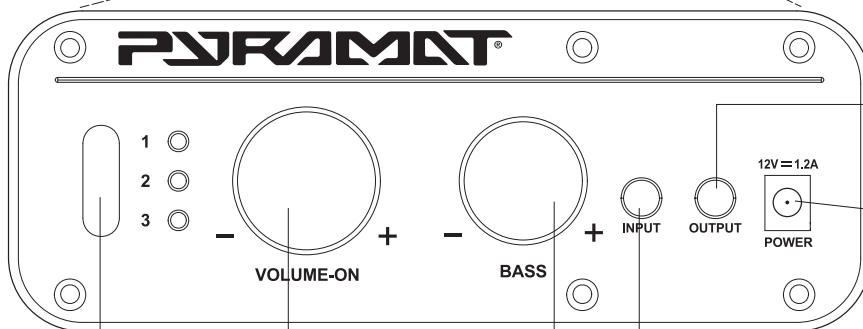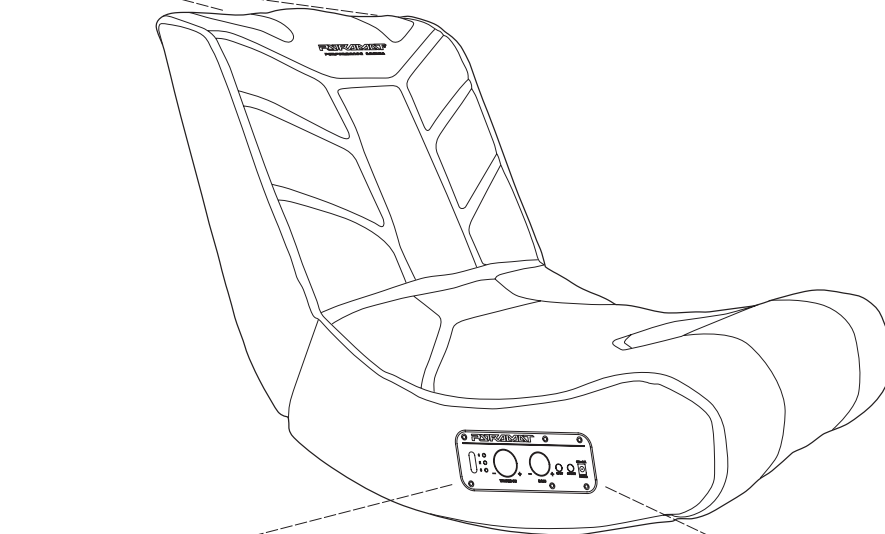

### Control panel

#### Channel selector button

Select the same channel as the transmitter by pressing the channel selector button.

#### Volume/power knob

Twist to click on and power up and adjust the volume level.

#### Bass knob

Twist to adjust the bass to your preference.

#### Input port

Connect the 3.5mm mini audio cable here from game consoles, MP3 players, home theater, satellite receiver and stereo receiver.


#### Output port

Connect multiple Sound Rockers together for multi-user fun.


#### Power DC port

Connect supplied 12-volt power adapter here.


# SET-UP

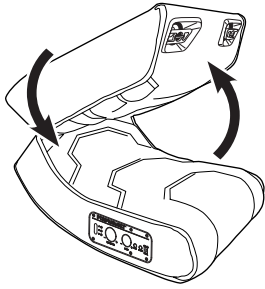

**1** Unfold the top portion of the Sound Rocker until the backrest is flush with the seat portion. Secure velcro tab on the bottom of the rocker.

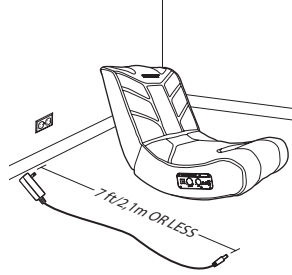

**2** Place the Sound Rocker so that the control panel is less than 7 ft./2.1 meters from the power source.

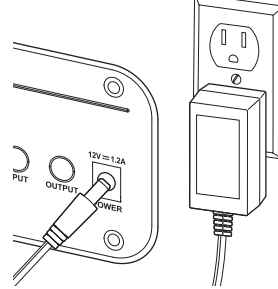


**3** Connect the power adapter to the power DC port on the control panel. Then plug the power adapter into an electrical outlet.

**! CAUTION:** Keep fingers clear of the folding seam when folding or unfolding the rocker.




**4** Twist the volume knob on the control panel to click on the power.

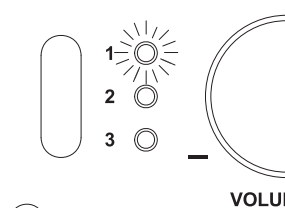


**5** If the unit is receiving power press the channel selector button and a channel light will appear, you will hear the radio or static. Press the channel selector button 4 times or until the LED turns off to power off the wireless.


## WIRELESS TRANSMITTER SET-UP

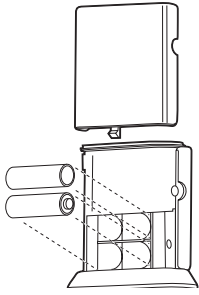

**1** Remove the casing and insert 2 AA batteries (batteries not included).

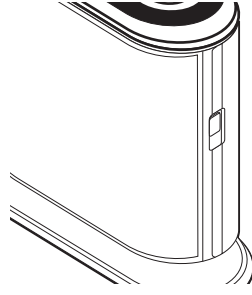

**2** Turn on the power switch at the back of the transmitter. The light appears when the power is turned on.

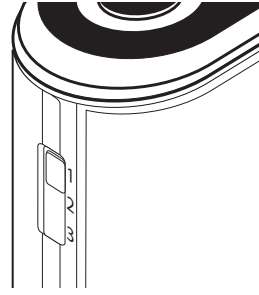


**3** Select the desired transmitter channel: 1, 2 or 3. Three channels are available for the best quality reception. If you experience static or poor reception, try another channel.

**! WARNING:** Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.




**4** Twist the volume knob on the control panel to click on the power.

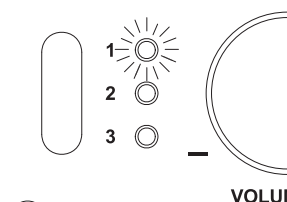


**5** Press the channel selector button once to turn on the channel selector. Press the channel selector button again to select the same channel as the transmitter. Example: 1-1, 2-2 or 3-3. To add multiple Sound Rockers, simply select the same channel on each rocker.

**Note:** Both the transmitter and control panel must be on the same channel to hear sound.


## WIRELESS TRANSMITTER MULTI-USER CONNECTION

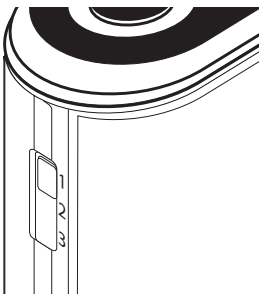

**1** For multi-user wireless set-up, follow the wireless transmitter set-up steps above.

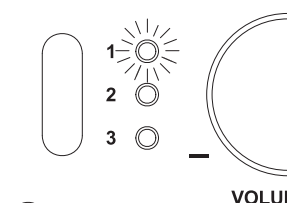

**2** To add multiple Sound Rockers, simply select the same channel on each additional chair. One transmitter allows up to 8 chairs to be used at the same time.

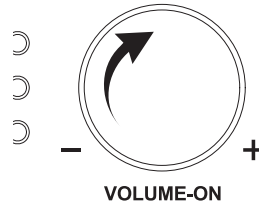

**3** Twist the volume knob on the control panel to click on the power.

**Note:** If the additional rockers are receiving interference, try changing the channel on both the transmitter and the sound rockers. Multiple Sound Rockers can also be connected by using the 3.5 mm Mini Audio and the Multi-user input. (See multi-user connection under direct connection methods).

# WIRELESS CONNECTION METHODS

 
## Video Game Console Connection Cables

XBOX 360®, PLAYSTATION 2®, PLAYSTATION 3®, GAMECUBE® and others


There are five types of audio/video cables that come with video game consoles:



**1. Standard AV/RCA Cable**  
(red, white–audio; yellow–video)




**4. Coaxial Cable**  
(single black cable)

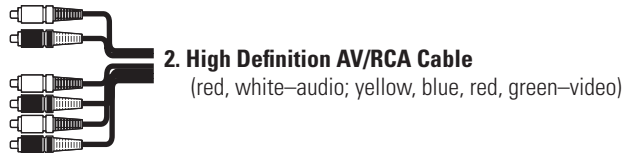

**2. High Definition AV/RCA Cable**  
(red, white–audio; yellow, blue, red, green–video)



**5. HDMI Cable**  
(single cable)

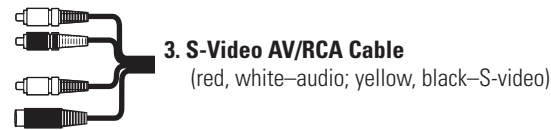


**3. S-Video AV/RCA Cable**  
(red, white–audio; yellow, black–S-video)

**Note:** If you have a coaxial cable or HDMI cable, you will also need to purchase a male to male RCA audio cable from the console manufacturer or local electronics retailer.

## AV/RCA Cable Connection

For standard AV/RCA cable, high definition AV/RCA cable and S-Video AV/RCA cable.

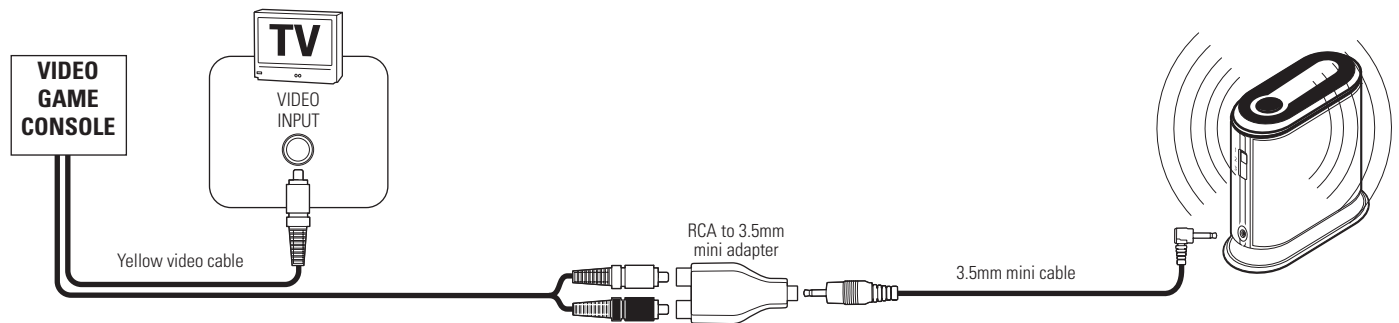

**1** Follow the instructions from the video game console's manufacturer to connect the video cable(s) from your video game console to your television.


**Note:** Depending on your connection, there may be more than one video cable from your video game console.

**2** Connect the RCA audio cables from the video game console to the RCA to 3.5mm mini adapter.

**3** Connect one end of the 3.5mm mini cable to the adapter and the other end to the input port on the transmitter.

## Coaxial Cable Connection

If you have a coaxial cable, you will also need to purchase a male to male RCA audio cable from an electronics retailer.

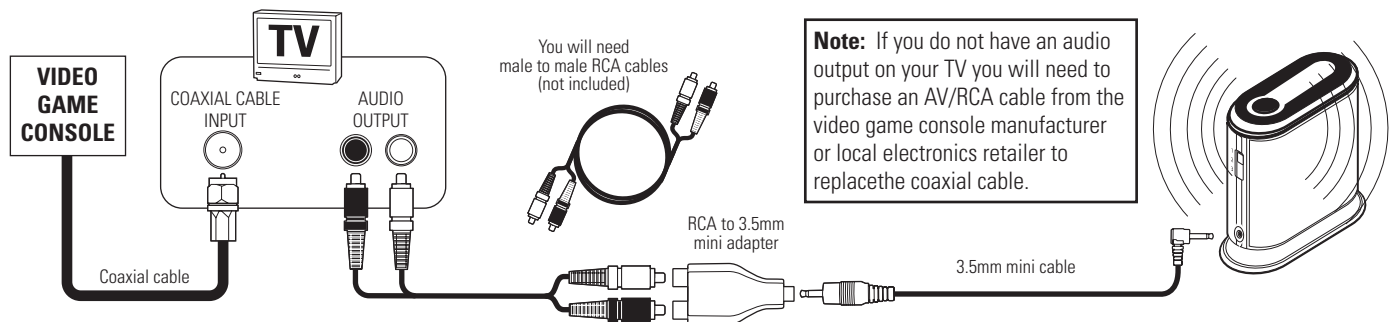

**1** Follow the instructions from the video game console's manufacturer to connect the coaxial cable from your video game console to your television.

**2** Connect the male to male RCA audio cable (not included) to the AUDIO OUTPUT source on the TV.

**3** Connect the RCA audio cables from the TV to the RCA to 3.5mm mini adapter.

**4** Connect one end of the 3.5mm mini cable to the adapter and the other end to the input port on the transmitter.


**Note:** If you do not have an audio output on your TV you will need to purchase an AV/RCA cable from the video game console manufacturer or local electronics retailer to replace the coaxial cable.

You will need male to male RCA cables (not included)

## WIRELESS CONNECTION METHODS

### HDMI Cable and PS3® Connection

HDMI cable is for high definition and transfer both audio and video from the source to the TV. If you are using an HDMI cable with your PS3® you can use the HDMI connection for High Definition Video and use the AV/RCA Cable for audio.

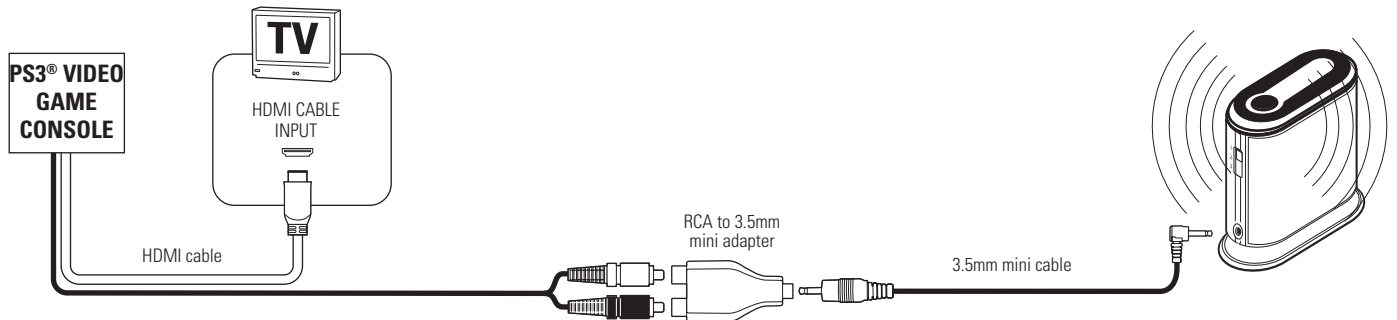

**1** Follow the instructions from the PS3® to connect the HDMI cable from your video game console to your television.


**2** Connect the RCA audio cables from the video game console to the RCA to 3.5mm mini adapter.  
**Note:** Do not connect the yellow (video) cable.

**3** Connect one end of the 3.5mm mini cable to the adapter and the other end to the input port on the transmitter.

**4** On your PS3® system menu go to Settings>Sound Settings>Audio Output >Settings>Select Audio Input Connector or AV Multi. The audio will now play through the RCA Cables and the TV will still have High Definition.

### Audio/Video Device Connection

#### TV, DVD PLAYER, VCR, SATELLITE RECEIVER, STEREO

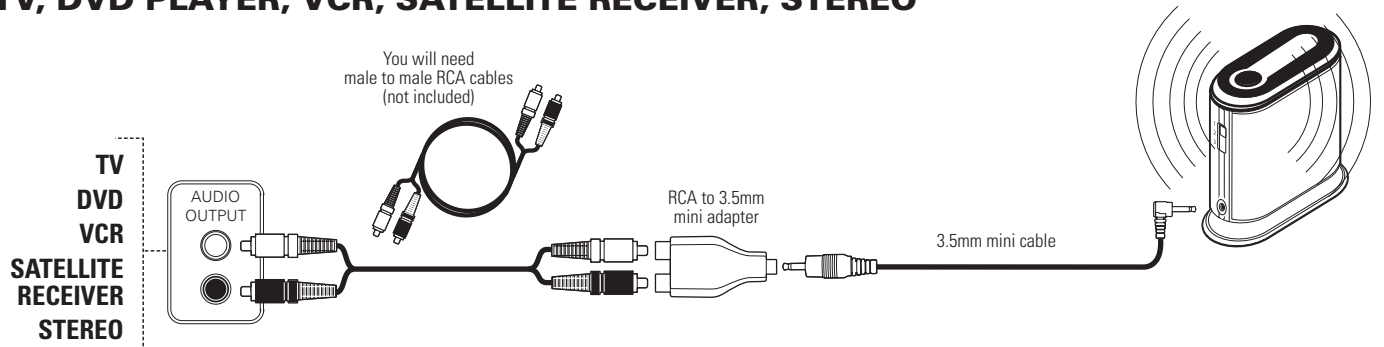

**1** Connect a male to male RCA audio cable (not included) to the audio/video device's AUDIO OUTPUT source.

**2** Connect the RCA audio cables from the audio/video device to the RCA to 3.5mm mini adapter.

**3** Connect one end of the 3.5mm mini cable to the adapter and the other end to the input port on the transmitter.

**Note: Connection must be made to an AUDIO OUTPUT source. The red and white audio connections on the front of most devices are AUDIO INPUT. SOUND WILL NOT PLAY FROM AN AUDIO INPUT SOURCE.**

# DIRECT CONNECTION METHODS

If you experience static or poor reception from your wireless connection in your location, you may need to select one of the direct connection methods below to ensure the best possible sound quality.

## Video Game Console Connection Cables

XBOX 360®, PLAYSTATION 2®, PLAYSTATION 3®, GAMECUBE® and others

There are five types of audio/video cables that come with video game consoles:




**1. Standard AV/RCA Cable**  
(red, white–audio; yellow–video)




**4. Coaxial Cable**  
(single black cable)


**Note:** If you have a coaxial cable or HDMI cable, you will also need to purchase a male to male RCA audio cable from the console manufacturer or local electronics retailer.

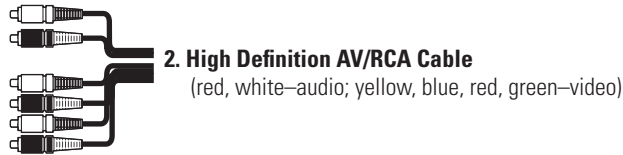

 **2. High Definition AV/RCA Cable**  
(red, white–audio; yellow, blue, red, green–video)




**5. HDMI Cable**  
(single cable)

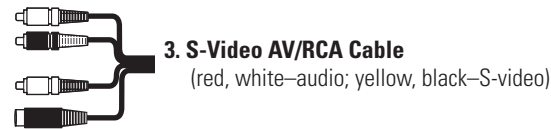

**3. S-Video AV/RCA Cable**  
(red, white–audio; yellow, black–S-video)

## AV/RCA Cable Connection

For standard AV/RCA cable, high definition AV/RCA cable and S-Video AV/RCA cable.

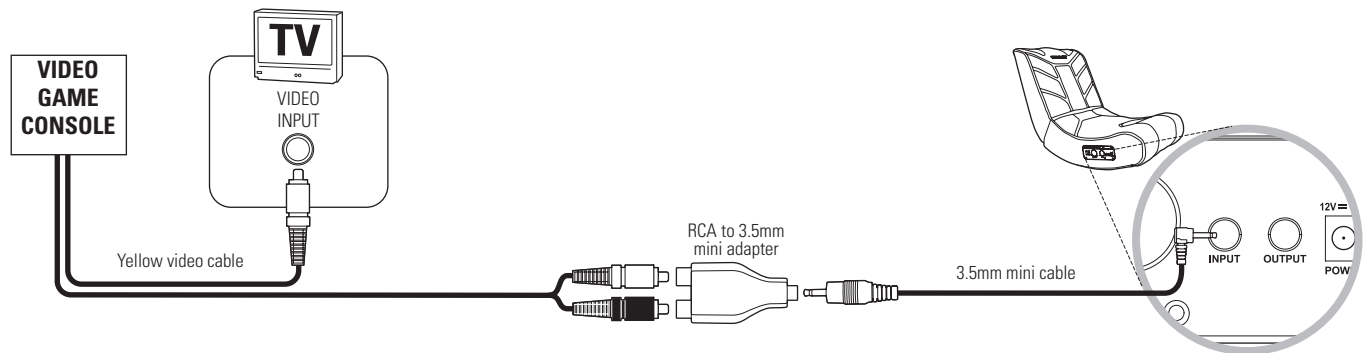

**1** Follow the instructions from the video game console's manufacturer to connect the video cable(s) from your video game console to your television.


**Note:** Depending on your connection, there may be more than one video cable from your video game console.

**2** Connect the RCA audio cables from the video game console to the RCA to 3.5mm mini adapter.

**3** Connect one end of the 3.5mm mini cable to the adapter and the other end to the INPUT port on the Sound Rocker.

## Coaxial Cable Connection

If you have a coaxial cable, you will also need to purchase a male to male RCA audio cable from an electronics retailer.

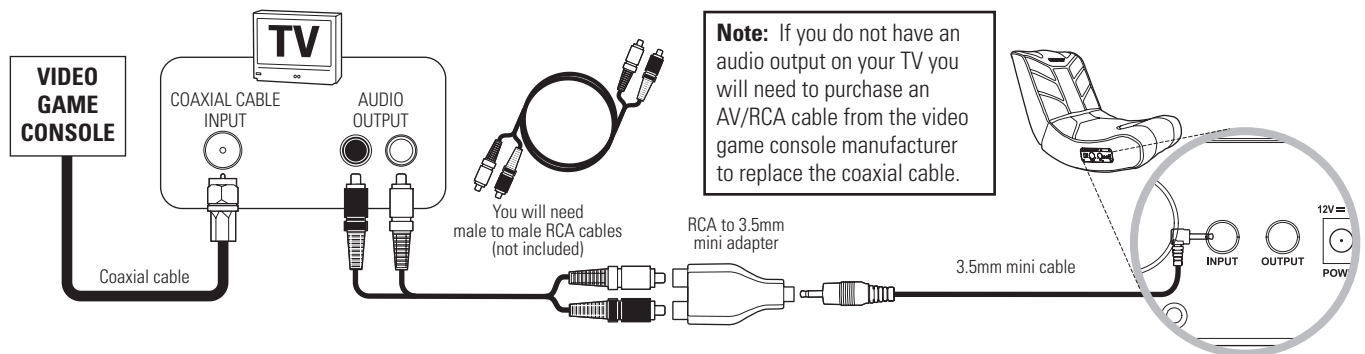

**Note:** If you do not have an audio output on your TV you will need to purchase an AV/RCA cable from the video game console manufacturer to replace the coaxial cable.

**1** Follow the instructions from the video game console's manufacturer to connect the coaxial cable from your video game console to your television.

**2** Connect the male to male RCA audio cable to the AUDIO OUTPUT source on the TV.


**3** Connect the RCA audio cables from the video game console to the RCA to 3.5mm mini adapter.

**4** Connect one end of the 3.5mm mini cable to the adapter and the other end to the INPUT port on the Sound Rocker.

## DIRECT CONNECTION METHODS

### HDMI Cable and PS3® Connection

HDMI cable is for high definition and transfer both audio and video from the source to the TV. If you are using an HDMI cable with your PS3® you can use the HDMI connection for High Definition Video and use the AV/RCA Cable for audio.

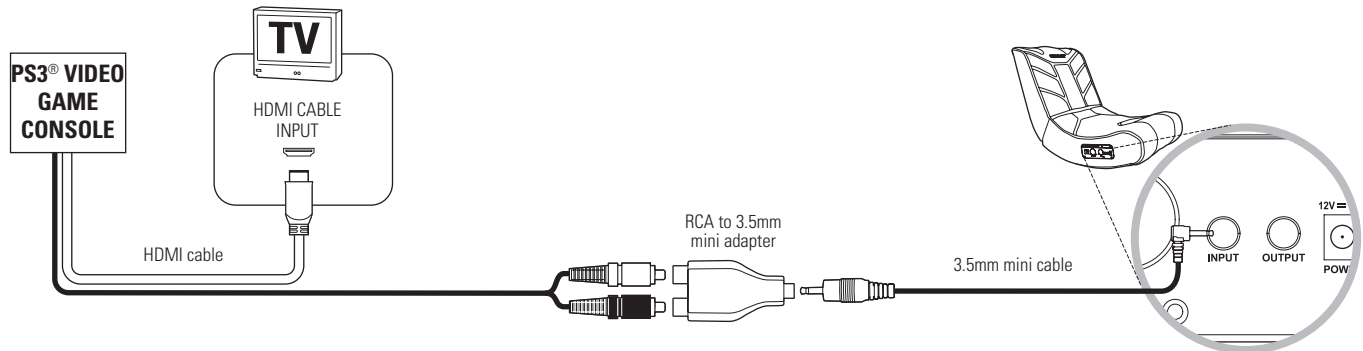

**1** Follow the instructions from the PS3® to connect the HDMI cable from your video game console to your television.


**2** Connect the RCA audio cables from the video game console to the RCA to 3.5mm mini adapter.  
**Note:** Do not connect the yellow (video) cable.

**3** Connect one end of the 3.5mm mini cable to the adapter and the other end to the INPUT port on the Sound Rocker.

**4** On your PS3® system menu go to Settings>Sound Settings>Audio Output>Settings>Select Audio Input Connector or AV Multi. The audio will now play through the RCA Cables and the TV will still have High Definition.

### Audio/Video Device Connection

#### TV, DVD PLAYER, VCR, SATELLITE RECEIVER, STEREO

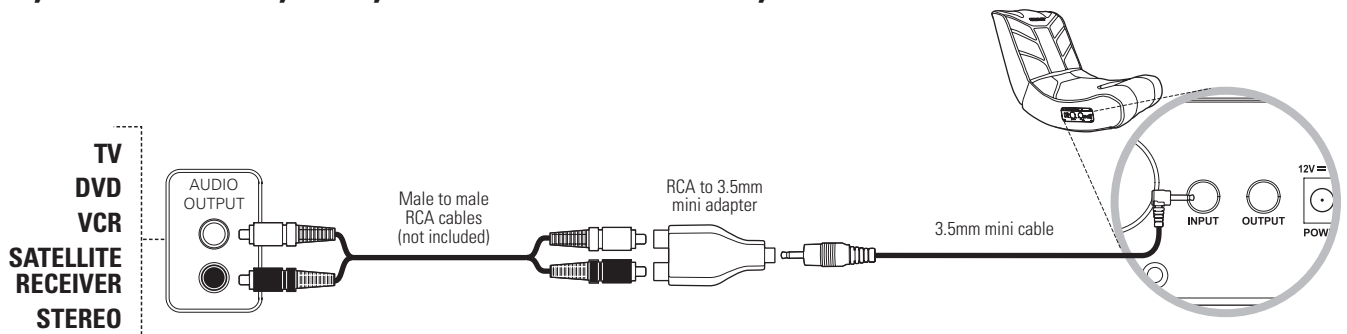

**1** Connect a male to male RCA audio cable (not included) to the audio/video device's AUDIO OUTPUT source.

**2** Connect the RCA audio cables from the audio/video device to the RCA to 3.5mm mini adapter.


**3** Connect one end of the 3.5mm mini cable to the adapter and the other end to the INPUT port on the Sound Rocker.

**Note: Connection must be made to an AUDIO OUTPUT source. The red and white audio connections on the front of most devices are AUDIO INPUT. SOUND WILL NOT PLAY FROM AN AUDIO INPUT SOURCE.**

## DIRECT MULTI-USER CONNECTION

### Connect up to eight Sound Rockers together for multi-user fun!

After connecting one Sound Rocker to an audio/video device, you can connect additional Sound Rockers together.

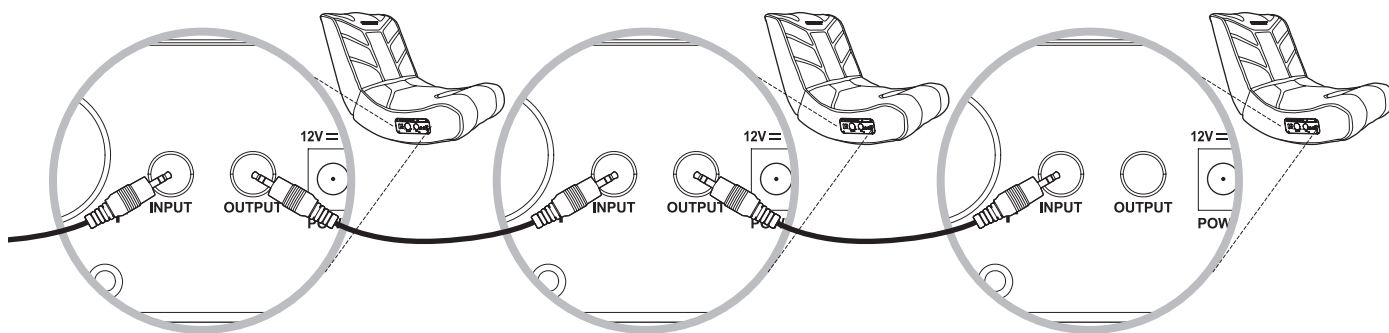


**1** After connecting one Sound Rocker to an audio/video device, you can connect additional Sound Rockers together.

**2** Connect the 3.5mm mini cable to the OUTPUT port on the first Sound Rocker and then to the INPUT port on the second Sound Rocker.


**3** Repeat step 2 to add more Sound Rockers.

## PORTABLE AUDIO/HANDHELD GAME DEVICE CONNECTION

Use the 3.5mm mini plug to connect to an MP3 player, an iPod®, or a handheld game device such as Nintendo DS®, Nintendo DS Lite®, and PSP®.

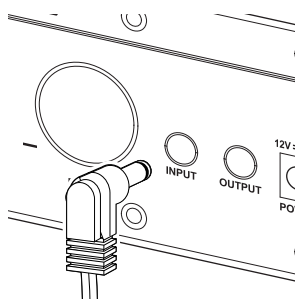

**1** Insert the 3.5 mm mini cable into the INPUT port on the control panel.

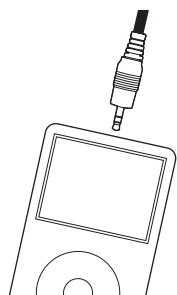

**2** Insert the other end of the 3.5 mm mini cable into your portable device.

**CAUTION:** Power off all audio/video devices prior to proceeding with the Sound Rocker connection method.

**Need Help?** Visit our website at [www.pyramat.com](http://www.pyramat.com), send an e-mail to [service@pyramat.com](mailto:service@pyramat.com) or call toll-free at **877-591-1012**.

## TROUBLESHOOTING GUIDE

Problem	Possible Cause	Solution
Unable to hear sound.	The audio cables are not connected properly.	Check the connection on your audio/video device. The RCA cables should be connected to the AUDIO OUTPUT jacks. Check the connection to your rocker. The RCA cables (red and white) must be connected to the RCA to 3.5mm mini adapter.
	Transmitter and/or Sound Rocker power is not on.	Check to make sure transmitter power is on and the power knob on the Sound Rocker is on with the volume turned up.
	Different channels are selected on the transmitter and control panel.	Check to make sure that both the wireless channel on the transmitter and the control panel are on the same: 1–1, 2–2 or 3–3.
Transmitter power light does not light up.	The batteries are old or not installed properly.	Check to make sure the batteries in the transmitter are working. Power light on the transmitter should be on when batteries are installed correctly and have a full charge.
Static is interfering with the sound.	Radio wave interference.	Try switching both the transmitter and the control panel to another channel. If you have tried all three channels and are still hearing interference, your location has too many radio waves and the Sound Rocker will need to be plugged in directly through the cables.
Sound Rocker does not turn on.	The power adapter is disconnected from the electrical outlet or the electrical outlet has no power.	Check the plug on the power adapter. When properly connected with the volume knob on, the logo on the back of the rocker will illuminate. If the Sound Rocker still doesn't power up, try another electrical outlet.
Unable to connect to the gaming console.	Your video game console has a coaxial cable instead of an RCA audio cable.	Use the instructions provided by the video game console's manufacturer to hook up the video game console to an intermediary device (such as a TV, DVD, VCR, satellite receiver, etc.). Your intermediary device must have both a coaxial input jack (the standard jack for cable TV) and an RCA audio output jack.
		Purchase an RCA replacement cable directly from the console manufacturer or local electronics retailer.
	Cables are incorrectly connected.	Check that the console's RCA audio cables are connected to the Sound Rocker's 3.5mm female to RCA female adapter (red to red and white to white).
		Check that the Sound Rocker 3.5mm mini audio cable is connected to the AUDIO INPUT jack on the rocker.
The yellow RCA video cable is not connected properly.	Check that the console's RCA video cable (usually yellow) is connected to the VIDEO INPUT jack on the TV.	
Sound only plays from one speaker.	Cables are incorrectly connected.	Check that all RCA audio connections are correct – red to red, white to white. Make sure the 3.5mm mini audio cable is firmly inserted into the AUDIO INPUT jack and the 3.5mm female to RCA female adapter.
	Audio/video device has a single MONO audio output (a common problem when connecting to an older TV or VCR).	If your audio source is mono only, as found mainly on older model TVs and VCRs, an RCA "Y" adaptor (1 male to 2 male, not included) is needed to send the signal to both Pyramat speakers. Please note: the use of this type of adaptor will not produce a true stereo sound. For optimal performance, it is recommended that you connect your Sound Rocker to stereo outputs only.
Missing or broken cables or mini adapters.		Replace items immediately. Replacement cables and mini adapters can be purchased at your local audio accessory dealer or at <a href="http://www.pyramat.com">www.pyramat.com</a> .
Missing or broken power adapter.		Replace immediately with an authorized Pyramat power adapter. Do not use the unit until the damaged power adapter has been replaced.

## S1500-W Wireless Sound Rocker Limited Warranty

Pyramat warrants this product and any included accessories against defects in material and workmanship for a period of 90 days from the date of first consumer purchase. This warranty is enforceable only by the original purchaser. ALL DAMAGED OR MISSING PARTS MUST BE REPORTED WITHIN 14 DAYS OF PURCHASE.

This warranty covers all defects in materials and workmanship, but DOES NOT COVER the following:

1. Damage, deterioration or malfunction resulting from:

a. Acts of God, accident, misuse, abuse, negligence, improper installation, maintenance or operation, or failure to follow the instructions contained in this manual.

b. Any shipment of the product (claims must be presented to the carrier).

c. Repair, attempted repair or modification by anyone other than the Pyramat Service Center.

2. Any unit which has been altered or on which the serial number has been defaced, modified or removed.

3. Any unit used for industrial or commercial purposes.

4. Products sold AS IS or WITH ALL FAULTS, or consumables (such as fuses or batteries).

5. Customer installation, set-up, adjustments or signal reception problems.

Pyramat will repair or replace (at its discretion) units covered by this warranty, without charge to the consumer for labor or materials. CONSUMER IS RESPONSIBLE FOR ANY INSTALLATION OR REMOVAL CHARGES AND ANY INITIAL SHIPPING CHARGES. However, we will pay the return shipping charges to any destination within the United States if repairs are covered by the warranty.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. PYRAMAT SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE LENGTH OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

### TO OBTAIN WARRANTY SERVICE

For service assistance, product information, or to locate the dealer nearest you, please call or write:

**Pyramat Service Center**  
**877-591-1012**  
**service@pyramat.com**

For further information on how to order accessories for this product or other Pyramat products, please visit our website at **www.pyramat.com**.

### IMPORTANT

For your records, save your original sales receipt with this manual and write the serial number here.

---

## FCC AND IC STATEMENT

This Class B digital apparatus complies with Canadian ICES-003 and part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE : The manufacturer is not responsible for ANY interference, for example RADIO OR TV interference, caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

### **FCC part 15.105:**

**NOTE :** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures :

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



**If you have problems with your Sound Rocker,  
DO NOT RETURN TO STORE.  
Follow instructions in this manual.  
Failure to follow these instructions may damage  
your Sound Rocker and void your warranty.**

---

**Need Help?** Visit our website at [www.pyramat.com](http://www.pyramat.com), send an e-mail to [service@pyramat.com](mailto:service@pyramat.com) or call toll-free at **877-591-1012**.