

# PYRAMAT®

PERFORMANCE GAMING

## S2000 SOUND ROCKER™



## OWNER'S MANUAL

**Read and understand this entire manual before using!  
For assistance contact Pyramat. DO NOT RETURN TO STORE.**

Item Number:  
**10175001**

Congratulations on the purchase of your Pyramat S2000 Sound Rocker. The Sound Rocker is a comfortable, rockable chair that delivers a powerful audio experience designed to intensify your enjoyment of games, movies, music and more. To ensure the best results, please read this manual completely before operating your Sound Rocker and retain it for future reference.

## CONTENTS

Safety Warnings .....	1	Direct Connection Methods .....	4 - 5
Before You Begin.....	2	Direct Multi-User Connection.....	6
Features.....	2	Troubleshooting Guide.....	7
Set-Up.....	3	Warranty .....	8
Portable Audio/Handheld Game Device Connection .....	3		

## SAFETY WARNINGS

**⚠ WARNING:** The Pyramat Sound Rocker is intended for indoor use only. TO REDUCE THE RISK OF FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

- Do not expose to direct sunlight or extreme temperatures.
- Adult supervision is required for set-up.
- Use only with the supplied power adapter. The power adapter is not a toy.
- Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Excessive use of audio equipment at high volume may lead to hearing loss. Listen responsibly and use common sense.
- Children under 13 should not use this product without parental supervision.
- DO NOT wash or soak the Sound Rocker with water. If cover becomes wet, disconnect power immediately and do not use until totally dry.
- To avoid injury or death from electrical shock, NEVER open the electrical cabinet or remove the cover.

 
The Sound Rocker is compatible with:

- All gaming consoles (including Xbox 360® and Playstation 3®)
- MP3 players
- TVs, DVDs, VCRs
- Portable gaming devices (including Nintendo DS®, Nintendo DS Lite®, and PSP®)


**Need Help?** Visit our website at [www.pyramat.com](http://www.pyramat.com), send an e-mail to [service@pyramat.com](mailto:service@pyramat.com) or call toll-free at **877-591-1012**.

## BEFORE YOU BEGIN

Remove the foam separators from the Sound Rocker and take unit out of box. Check to make sure you have all the parts shown below and that all items are in good condition.

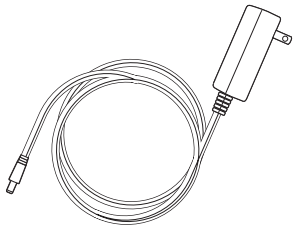

9 ft. 12 volt/1.6 amp DC power adapter

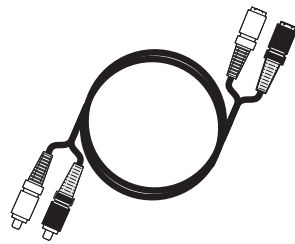 


11 ft. RCA male to female audio cable

**CAUTION:** Keep fingers clear of the folding seam when opening the unit.

**Note:** Replacement cables and mini adapters can be purchased at your local audio accessory dealer or at [www.pyramat.com](http://www.pyramat.com).


## FEATURES

 Illuminating speakers

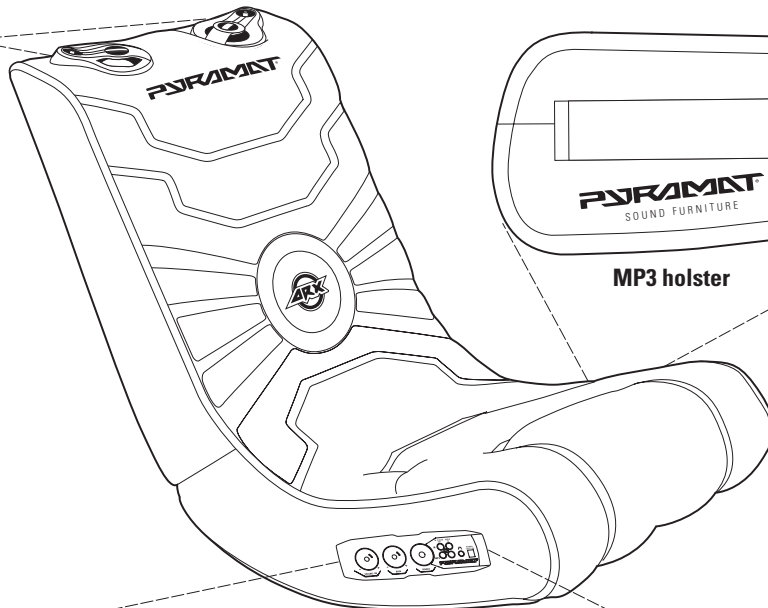

MP3 holster

 MP3 and portable CD/DVD player plug

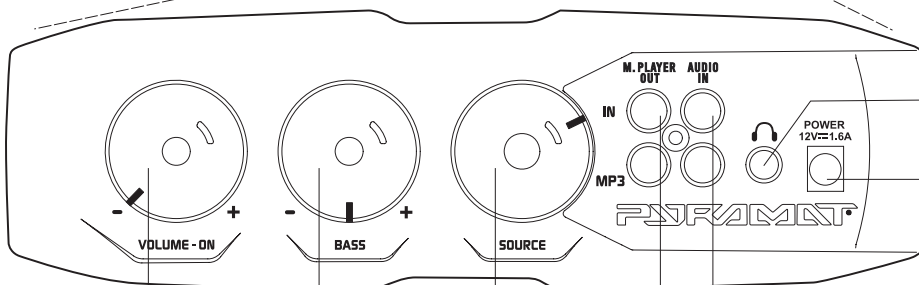

**Headphone port**  
Connect headphones here.

**Power DC port**  
Connect supplied 12-volt power adapter here.

**Control Panel**

**Volume/power knob**  
Twist to click on and power up and adjust the volume level.

 
**Bass knob**  
Twist to adjust the bass to your preference.

**Source knob**  
Select input for video games, home theater, satellite receiver and stereo receiver. Select MP3 for MP3 and portable CD/DVD players connected to the MP3 and portable CD/DVD player plug.


**Input RCA audio ports**  
Connect red and white RCA audio cable here from game consoles, home theater, satellite receiver and stereo receiver.

**Multi-player RCA audio output ports**  
Connect up to eight Sound Rockers together for multi-user fun.


## SET-UP

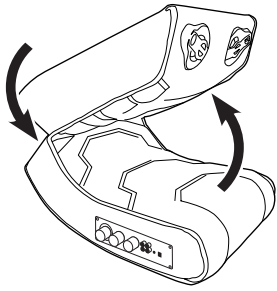

 **1** Unfold the top portion of the Sound Rocker until the backrest is flush with the seat portion. Secure velcro tab on the bottom of the rocker.

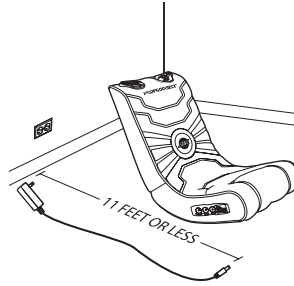


 **2** Place the Sound Rocker so that the control panel is less than 9 ft./2.75 meters from the power source.

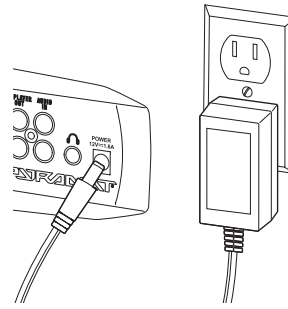


**3** Connect the 12-volt DC power adapter to the electrical outlet and then to the power DC port on the control panel.

 **! CAUTION:** Keep fingers clear of the folding seam when folding or unfolding the rocker.

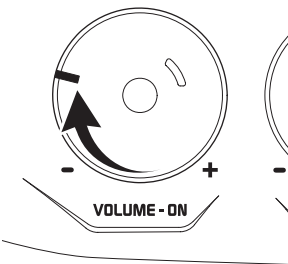

 
**4** Twist the volume knob to click on the power.

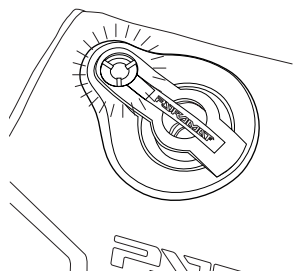


**5** Check the speakers on top to see if the speakers are lit up. Twist volume knob to power off the Sound Rocker, then proceed to the connection method shown below for your audio/video device.

## PORTABLE AUDIO/HANDHELD GAME DEVICE CONNECTION

 
Use the 3.5mm mini plug to connect to an MP3 player, an iPod®, or a handheld game device such as Nintendo DS®, Nintendo DS Lite®, and PSP®.

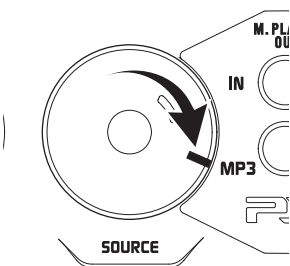

 **1** Turn the source knob on the control panel to MP3.

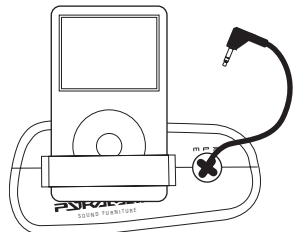

 
**2** Slip your player into the MP3 holster on the side of the Sound Rocker.

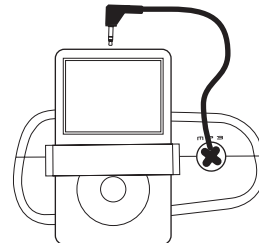

**3** Connect the device to the Sound Rocker with the 3.5mm mini plug from inside the pocket.  
**Note:** If your handheld game device does not have a headphone jack it is not compatible with the Sound Rocker.

**! CAUTION:** Power off all audio/video devices prior to proceeding with the Sound Rocker connection method.

# DIRECT CONNECTION METHODS

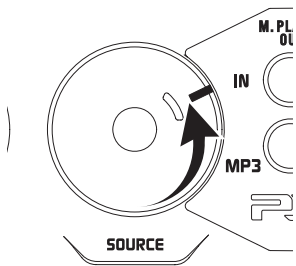 


**1** Turn the source knob on the control panel to IN.


## Video Game Console Connection Cables

 XBOX 360™, PLAYSTATION 2™, PLAYSTATION 3™, GAMECUBE™ and others

There are five types of audio/video cables that come with video game consoles:




 **1. Standard AV/RCA Cable**  
(red, white–audio; yellow–video)



**3. Coaxial Cable**  
(single black cable)

 
**Note:** If you have a coaxial cable or HDMI cable, you will also need to purchase a male to male RCA audio cable from the console manufacturer or local audio accessory dealer.

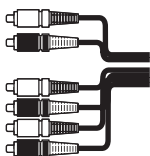

**2. High Definition AV/RCA Cable**  
(red, white–audio; yellow, blue, red, green–video)



 
**5. HDMI Cable**  
(single cable)

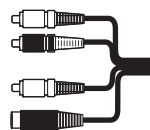

**3. S-Video AV/RCA Cable**  
(red, white–audio; yellow, black–S-video)

## AV/RCA Cable Connection

 For standard AV/RCA cable, high definition AV/RCA cable and S-Video AV/RCA cable.

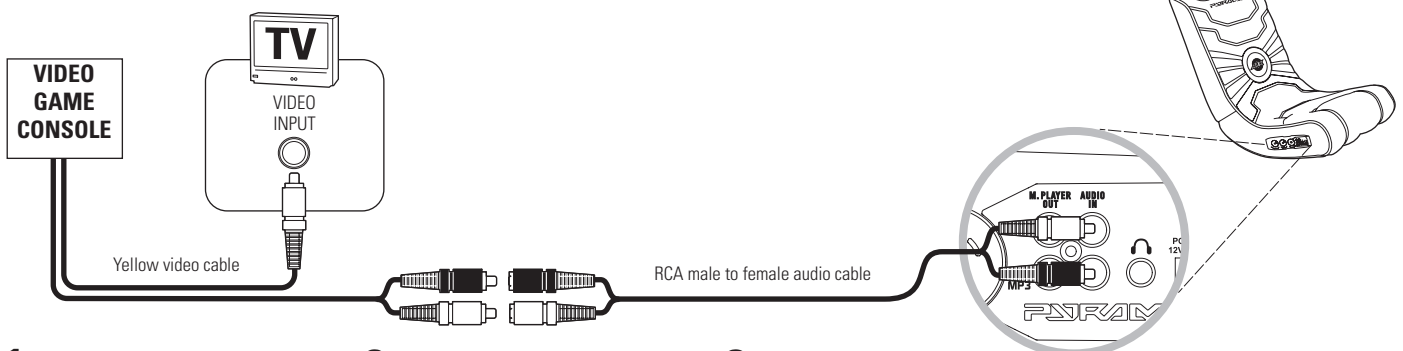

**1** Follow the instructions from the video game console's manufacturer to connect the video cable(s) from your video game console to your television.

**Note:** Depending on your connection, there may be more than one video cable from your video game console.


**2** Connect the RCA audio cable from the video game console to the female end of the RCA audio cable.

**3** Connect the male end of the RCA audio cable to the AUDIO IN port on the control panel.

# DIRECT CONNECTION METHODS
 
## Coaxial Cable Connection

If you have a coaxial cable, you will also need to purchase a male to male RCA audio cable from an electronics retailer.

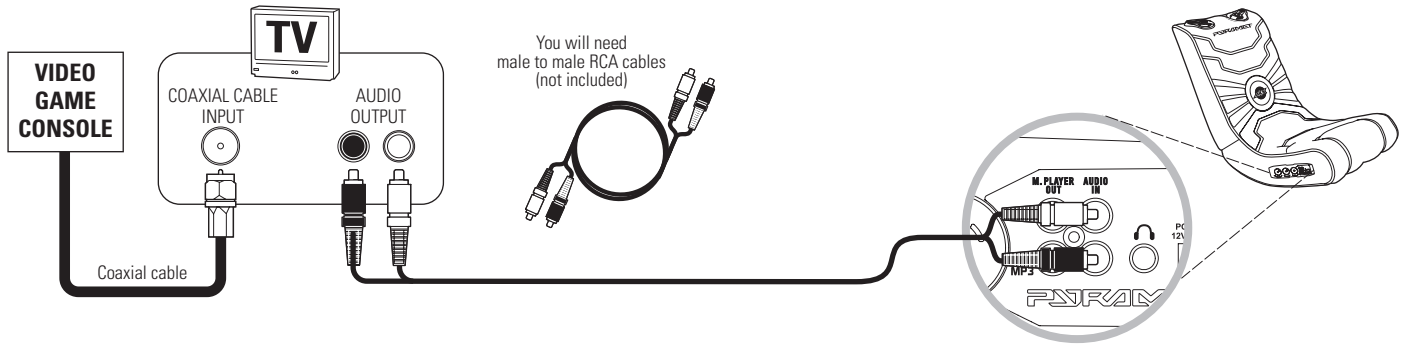


**1** Follow the instructions from the video game console's manufacturer to connect the coaxial cable from your video game console to your television.

**2** Connect the male to male RCA audio cable (not included) to the AUDIO IN port on the control panel.

**Note:** If you do not have an audio output on your TV you will need to purchase an AV/RCA cable from the video game console manufacturer or local audio accessory dealer to replace the coaxial cable.

## HDMI Cable and PS3® Connection

 HDMI cable is for high definition and transfer both audio and video from the source to the TV. If you are using an HDMI cable with your PS3® you can use the HDMI connection for High Definition Video and use the AV/RCA Cable for audio.

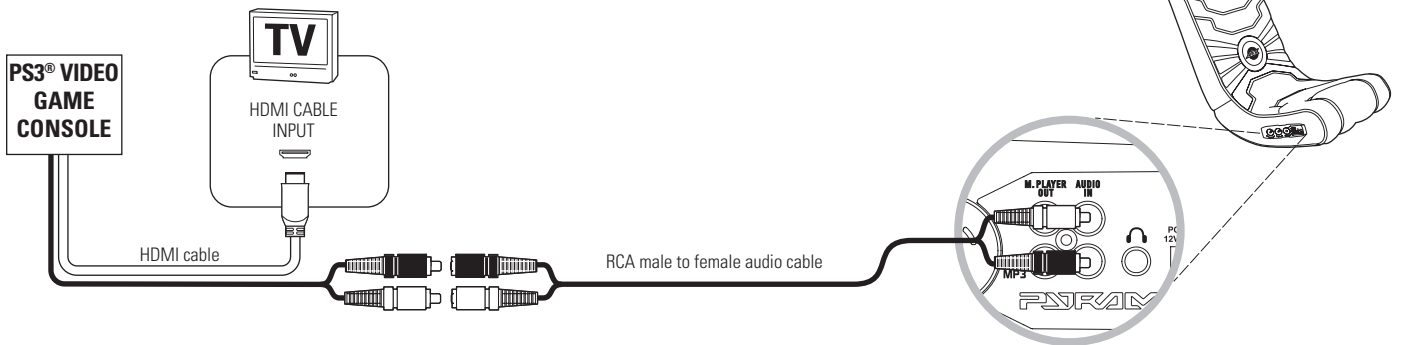


**1** Follow the instructions from the PS3® to connect the HDMI cable from your video game console to your television.

**2** Connect the RCA audio cable from the video game console to the female end of the RCA audio cable.

**3** Connect the male end of the RCA audio cable to the AUDIO IN port on the control panel.

**4** On your PS3® system menu go to Settings>Sound Settings>Audio Output >Settings>Select Audio Input Connector or AV Multi. The audio will now play through the RCA Cables and the TV will still have High Definition.

## Audio/Video Device Connection TV, DVD PLAYER, VCR, SATELLITE RECEIVER, STEREO

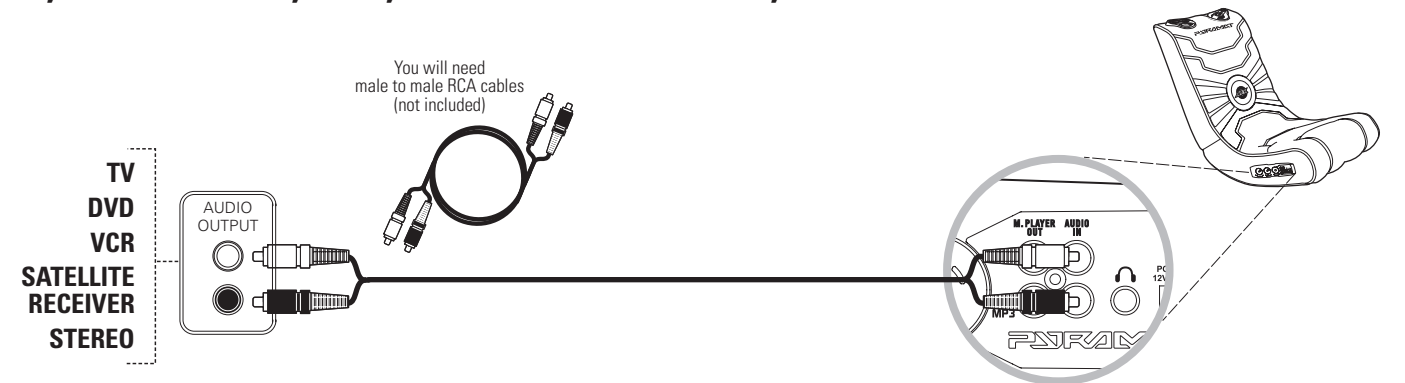 


**1** Connect a male to male RCA audio cable (not included) to the audio/video device's AUDIO OUTPUT source.

**2** Connect the male to male RCA audio cable (not included) from the audio/video device to the AUDIO IN port on the control panel.

**Note: Connection must be made to an AUDIO OUTPUT source. The red and white audio connections on the front of most devices are AUDIO INPUT. SOUND WILL NOT PLAY FROM AN AUDIO INPUT SOURCE.**
 
## DIRECT MULTI-USER CONNECTION

Connect up to eight sound rockers together for multi-user fun!

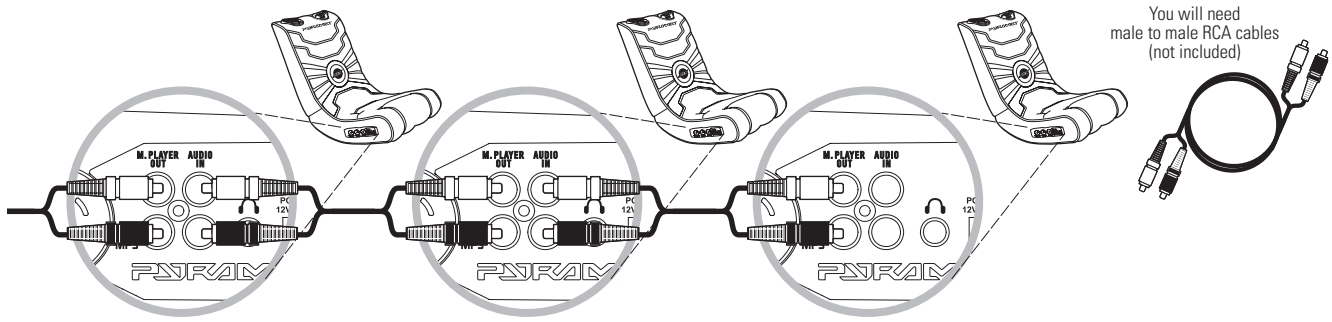

**1** After connecting one Sound Rocker to an audio/video device, you can connect additional Sound Rockers together. Connect a male to male RCA audio cable (not included) to the multi-player connection on the first Sound Rocker and then to the AUDIO IN port on the second Sound Rocker. Repeat to add up to eight Sound Rockers.

## TROUBLESHOOTING GUIDE

Problem	Possible Cause	Solution
Unable to hear sound	The RCA audio cables are not connected properly.	Check the connection on your audio/video device. The RCA cables should be connected to the AUDIO OUTPUT jacks. Check the connection on your rocker. The RCA cables (red and white) must be in the AUDIO IN ports.
	The power adapter is disconnected from the electrical outlet or the electrical outlet has no power.	Check the plug on the power adapter. When properly connected with the volume knob on, the speakers on top of the rocker will illuminate. If the Sound Rocker still doesn't power up, try another electrical outlet.
	The source knob on the control panel is in the wrong position.	Turn knob to input for video games and audio/video devices. Turn knob to MP3 for portable audio and handheld game devices.
Unable to connect to the gaming console	Cables are incorrectly connected.	Check that the console's RCA audio cables are connected to the Sound Rocker's RCA audio cables (red to red and white to white).
		Check that the Sound Rocker RCA audio cables (red and white) are connected to the AUDIO INPUT jacks on the rocker.
		Check that the console's RCA video cable (usually yellow) is connected to the VIDEO INPUT jack on the TV.
	Your video game console has a coaxial cable instead of an RCA audio cable	<p>If your video game console has an RCA audio cable, then connect the supplied RCA audio cable to the video game console's red and white audio cables and plug into the AUDIO IN port on the Sound Rocker.</p> <p>Use the instructions provided by the video game console's manufacturer to hook up the video game console to an intermediary device (such as a TV, DVD, VCR, satellite receiver, etc.). Your intermediary device must have both a coaxial input jack (the standard jack for cable TV) and an RCA audio output jack.</p> <p>Purchase an RCA replacement cable directly from the console manufacturer or local audio accessory dealer.</p>
Sound only plays from one speaker.	RCA cables are incorrectly connected.	Check that all RCA audio connections are correct – red to red, white to white.
	Audio/video device has a single MONO audio output (a common problem when connecting to an older TV or VCR).	If your audio source is mono only, as found mainly on older model TVs and VCRs, an RCA "Y" adaptor (1 male to 2 male; not included) is needed to send the signal to both Pyramat speakers. Please note: the use of this type of adaptor will not produce a true stereo sound. For optimal performance, it is recommended that you connect your Pyramat product to stereo outputs only.
No sound will play from the Sound Rocker.	RCA audio cables are incorrectly connected.	RCA audio cables (red and white) must be plugged in to AUDIO OUTPUT jacks in the source device (TV, VCR, etc.). If you are plugging the cables to the jacks in the front of your TV these are most likely AUDIO INPUT jacks.
Sound Rocker plays sound from one source but not another.	Source knob is not on the correct setting.	See page 2 for the correct knob position for the device you are playing.
	RCA cables are incorrectly connected.	Check that all RCA audio connections are correct – red to red, white to white.
Missing or broken cables.		Replace items immediately. Replacement cables and mini adapters can be purchased at your local audio accessory dealer or at <a href="http://www.pyramat.com">www.pyramat.com</a> .
Missing or broken power adapter.		Replace immediately with an authorized Pyramat power adaptor. Do not use the unit until the damaged power adapter has been replaced.

**Need Help?** Visit our website at [www.pyramat.com](http://www.pyramat.com), send an e-mail to [service@pyramat.com](mailto:service@pyramat.com) or call toll-free at **877-591-1012**.

## S2000 Sound Rocker Limited Warranty

Pyramat warrants this product and any included accessories against defects in material and workmanship for a period of 90 days from the date of first consumer purchase. This warranty is enforceable only by the original purchaser. ALL DAMAGED OR MISSING PARTS MUST BE REPORTED WITHIN 14 DAYS OF PURCHASE.

This warranty covers all defects in materials and workmanship, but DOES NOT COVER the following:

1. Damage, deterioration or malfunction resulting from:

a. Acts of God, accident, misuse, abuse, negligence, improper installation, maintenance or operation, or failure to follow the instructions contained in this manual.

b. Any shipment of the product (claims must be presented to the carrier).

c. Repair, attempted repair or modification by anyone other than the Pyramat Service Center.

2. Any unit which has been altered or on which the serial number has been defaced, modified or removed.

3. Any unit used for industrial or commercial purposes.

4. Products sold AS IS or WITH ALL FAULTS, or consumables (such as fuses or batteries).

5. Customer installation, set-up, adjustments or signal reception problems.

Pyramat will repair or replace (at its discretion) units covered by this warranty, without charge to the consumer for labor or materials. CONSUMER IS RESPONSIBLE FOR ANY INSTALLATION OR REMOVAL CHARGES AND ANY INITIAL SHIPPING CHARGES. However, we will pay the return shipping charges to any destination within the United States if repairs are covered by the warranty.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. PYRAMAT SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE LENGTH OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

### TO OBTAIN WARRANTY SERVICE

For service assistance, product information, or to locate the dealer nearest you, please call or write:

**Pyramat Service Center**  
**877-591-1012**  
**service@pyramat.com**

For further information on how to order accessories for this product or other Pyramat products, please visit our website at **www.pyramat.com**.

### IMPORTANT

For your records, save your original sales receipt with this manual and write the serial number here. Your serial number can be found on the retail box, your original power adapter, and on the care label on your sound rocker. It is 21 characters including dashes.

---



**If you have problems with your Sound Rocker,  
DO NOT RETURN TO STORE.**

**Follow instructions in this manual.  
Failure to follow these instructions may damage  
your Sound Rocker and void your warranty.**

---

**Need Help?** Visit our website at [www.pyramat.com](http://www.pyramat.com), send an e-mail to [service@pyramat.com](mailto:service@pyramat.com) or call toll-free at **877-591-1012**.